



KTM5900

24bit TMR Magnetic Encoder
Supports 1-4096 Pole Pairs
Nonlinear Self-calibration
Dual 16-bit 2MHz SAR ADC

Technical Support
sales.global@conntek.com.cn

Disclaimer

The information in this document is provided by Quanzhou KTsense Microelectronics Co., Ltd. (泉州昆泰芯微电子科技有限公司) (hereafter referred to as "KTsense Micro") on an "as is" basis for informational purposes only. KTsense Micro does not guarantee the accuracy of the information contained herein or the outcomes of its implementation. KTsense Micro assumes no liability for any errors or inaccuracies that may be present in this document. Users assume full responsibility for the application of the practices outlined in this document.

KTsense Micro owns the registered trademark CONNTEK, under which the CONNTEK brand sensors are marketed.

This document comes without any warranties, express or implied, including but not limited to warranties of merchantability, satisfactory quality, non-infringement, and fitness for a particular purpose. KTsense Micro, along with its employees, agents, and affiliates, is not liable for any losses arising from the use or reliance on this document.

This document is subject to change without prior notice and should not be construed as a commitment by KTsense Micro. Users should ensure they have the latest version of the relevant information before placing orders or integrating the product into their systems.

Users must evaluate the suitability of the product described in this document for their specific applications, including the required level of reliability and fitness for purpose.

This document and the described product may be subject to export control regulations. Export may require prior authorization from the competent authorities. The product is not intended, authorized, or warranted for use in applications requiring extended temperature ranges or unusual environmental conditions. High reliability applications, such as medical life-support or aviation systems, are specifically excluded.

The product may not be used for the development, production, maintenance, or storage of:

1. Chemical, biological, or nuclear weapons, including missile systems for such weapons.
2. Civil firearms, including spare parts or ammunition.
3. Defense-related products or materials for military or law enforcement use.
4. Applications that could cause serious harm to persons or property and that can be used as a means of violence in armed conflicts or similar situations.

No licenses or rights to any intellectual property of KTsense Micro or third parties are granted.

If this document is marked as "confidential" or similar, or if the content is reasonably understood to be confidential, the recipient must not disclose any part of the document to third parties without the express written consent of KTsense Micro. The recipient must take all necessary measures to maintain the confidentiality of the document, using at least the same degree of care as they use to protect their own confidential information, but no less than a reasonable degree of care. The recipient may only disclose the document to employees on a need-to-know basis, provided they are bound by confidentiality terms similar to those in this disclaimer. The document may only be used for the purpose for which it was received and may not be used for commercial purposes or to the detriment of KTsense Micro or its customers. These confidentiality obligations will last indefinitely but in any case, for no less than 10 years from the receipt of the document.

This disclaimer is governed by the laws of China, and any disputes arising from it will be subject to the exclusive jurisdiction of the courts in Shenzhen, China.

The invalidity of any provision in this disclaimer does not affect the validity of the remaining provisions. Previous versions of this document are repealed.

Copyright

This document and its contents are protected by copyright law. No part of this document may be reproduced or distributed in any form or manner without the prior written consent of KTsense Micro.

Contact Information

For the latest version of this document, go to our website at <https://en.conntek.com.cn/>.

For additional information, please contact our Direct Sales team and get help for your specific needs:

Region	Contact Information
Overseas	Email: sales.global@conntek.com.cn
China	Email: sales@conntek.com.cn

Table of Contents


1 Product Information	6
1.1 Product Features	6
1.2 Typical Applications	6
1.3 Product Introduction	6
2 Overall Introduction	7
2.1 System Architecture	7
2.2 Pin Definitions	8
2.3 Application Circuit	9
2.4 Normal Operating Parameters	10
2.5 External Magnet Parameters	10
2.6 Off Axis Application Magnet Parameters	11
3 Electrical Parameters	12
4 SPI Communication and MTP Control	13
4.1 SPI Timing	13
4.2 SPI Commands	15
4.3 Angle and Internal Signal Read (SPI Command 4)	16
4.3.1 Interpreting the State Bits	16
4.3.2 CRC Data Explanation	17
4.4 SPI Module Control Registers	18
4.5 SPI Angle Output Width Configuration	18
4.6 SPI Output Angle/Revolution Count Offset	19
5 Multiple Pole Pairs and Multi-Turn Settings	20
5.1 Number of Pole Pairs Setting	20
5.2 Current Number of Pole Pairs and Current Number of Turns	20
6 Linear Error Detection and Calibration (L)	22
6.1 Control Register ctrREG (L/Linear Calibration Function Block)	22
7 Non-linear Error Detection and Correction Module (N)	25
7.1 Automatic Fitting of Errors in One-Click Self-Calibration Module	26
7.2 Calibration Module (256 Points)	27
7.3 Representation of Calibration Data (256 Points)	28
8 Filter Module (F)	29
8.1 Parameters of the Dedicated Low-Pass Filter	29
8.2 Hysteresis Settings	30
9 ABZ Encoder Output Module (A)	31
9.1 Input Control	32
9.2 ABZ Output Frequency Limiting	33
9.3 Output Control	33
10 UVW Encoder Output (U)	36

11 Overall System Configuration (TOP)	38
11.1 Chip and Magnetic Sensor Connection Settings	38
11.2 Parallel Output Pin Configuration P0 to P6.	38
11.3 MTP Read/Write Control	39
12 Alarms and Detection (IRQ)	40
13 Package Information	42
14 Recommended Pad	43
15 Recommended Soldering Temperature Curve	43

1 Product Information

1.1 Product Features

- Max. 24-bit resolution of one pole pair
- Supports 1-4096 pole pairs
- Dual 16-bit 2MHz SAR ADC
- Max. 36MHz SPI
- Programmable ABZ (1-65536 lines)
- Programmable UVW (1-256 pole pairs)
- Independent PWM absolute angle
- Auto linear & non-linear calibration
- Post-calibration INL $\leq \pm 0.025^\circ$
- Off axis applications INL $\leq \pm 0.06^\circ$
- Integrated programmable op-amp
- High bandwidth input 80MHz
- Ultra low latency 3 μ s
- Integrated TMR sensor
- Operating temp: -40°C to 125°C
- QFN32 package

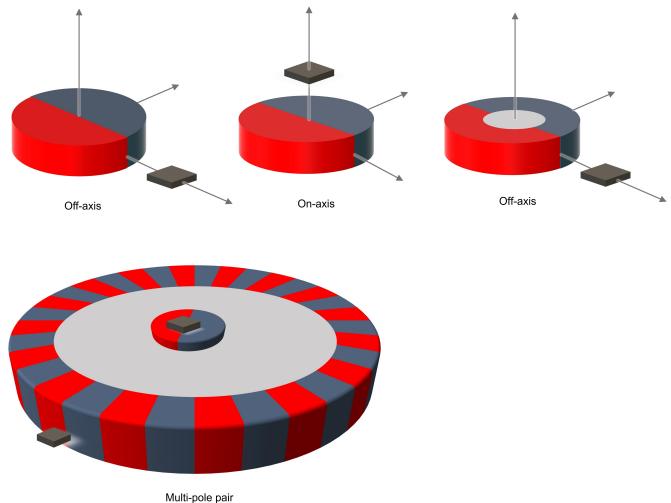

1.2 Typical Applications

- Servo motors
- Linear motors
- DDR direct drive motors
- Hollow joint robots

1.3 Product Introduction

KTM5900 is an 24-bit absolute angle encoder with 4096 pole pairs subdivision. It works with magneto-resistive sensors (TMR) to create a precise non-contact magnetic encoder. It reads sine and cosine signals from the sensor rapidly, enabling angle calculation through its high-speed digital circuit.

KTM5900 supports versatile angle output modes, including a 36Mbps SPI absolute angle output, programmable ABZ quadrature pulse incremental output (up to 65536 lines), programmable UVW incremental output (up to 256 pole pairs), and PWM absolute angle output.

Additional features of KTM5900 include automatic linear and non-linear calibration, Z signal calibration, absolute position synchronization for multi-pole applications, automatic TMR matching for orthogonal signal calculation, and programmable operational amplifier gain.

KTM5900 has made some optimizations to its functional safety, such as the SPI angle output communication with an 8-bit CRC verification and the integration of many self diagnostic alarm functions, such as TMR Input Sine/Cosine Amplitude Anomaly, Input Undervoltage Detection, Excessive Filter Lag, etc.

2 Overall Introduction

2.1 System Architecture

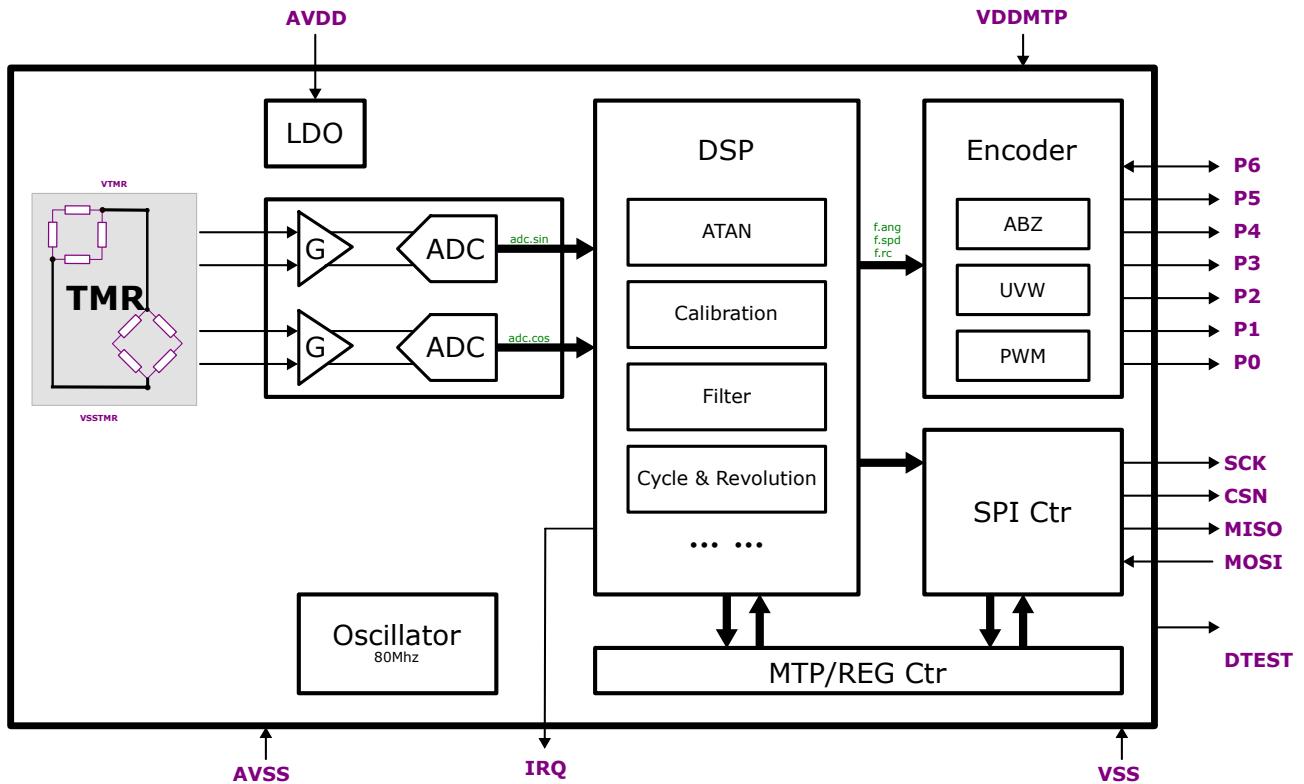


Figure 1: KTM5900 Chip Functional Diagram

KTM5900 is 24bit TMR Magnetic Encoder. It includes several functional modules, such as a 12-bit (4096 pole pairs) multi-pole pair counter, and an optimized filter, which can be configured through registers for the desired encoder resolution. This SoC offers a wide range of output options, including ABZ/UVW/PWM/SPI interfaces.

The system is equipped with automatic calibration and adaptive functions to correct sensor offset, sine/cosine amplitude matching, and phase orthogonality, ensuring minimal angle error and jitter. Additionally, the KTM5900 SoC features an industry-leading 2MHz 16-bit SAR ADC to enhance performance and precision.

A significant advantage of KTM5900 is its ability to automatically detect and correct non-linear errors during normal operation, with just a button press or an SPI command. Furthermore, KTM5900 integrates a 256-point error lookup table, allowing customers to improve absolute accuracy by writing nonlinear error corrections from optical encoders into KTM5900. When connected to AMR/TMR sensors and a single-pole magnet combination, both one-button self-calibration and the 256-point error lookup table can achieve INL \leq 0.025°.

2.2 Pin Definitions

Pin No.	Pin Name	I/O	Function
1	AVSS	I	Analog Ground
2	VREF	O	ADC Ref. Voltage
3	VSSAMR	I	Ground
4	/	N	NC
5	/	N	NC
6	/	N	NC
7	/	N	NC
8	/	N	NC
9	AVSS	I	Analog Ground
10	AVDD	I	Analog Power
11	IRQ	O	Alarm
12	P6	I/O	Mux. Parallel Output
13	P5	O	Mux. Parallel Output
14	P4	O	Mux. Parallel Output
15	P3	O	Mux. Parallel Output
16	P2	O	Mux. Parallel Output
17	P1	O	Mux. Parallel Output
18	P0	O	Mux. Parallel Output
19	MISO	O	SPI
20	MOSI	I	SPI
21	CSN	I	SPI
22	SCK	I	SPI
23	VSS	I	Ground
24	DVDDL	O	Digital 1.8V Output
25	DVDD	I	Digital Power Input
26	ZREF	I	0 Calib.Trigger
27	/	N	NC
28	/	N	NC
29	DTEST	I	Digital Test
30	VDDMTP	I	MTP Power
31	AVDD	I	Analog Power
32	AVSS	I	Analog Ground

Table 1: Pin List

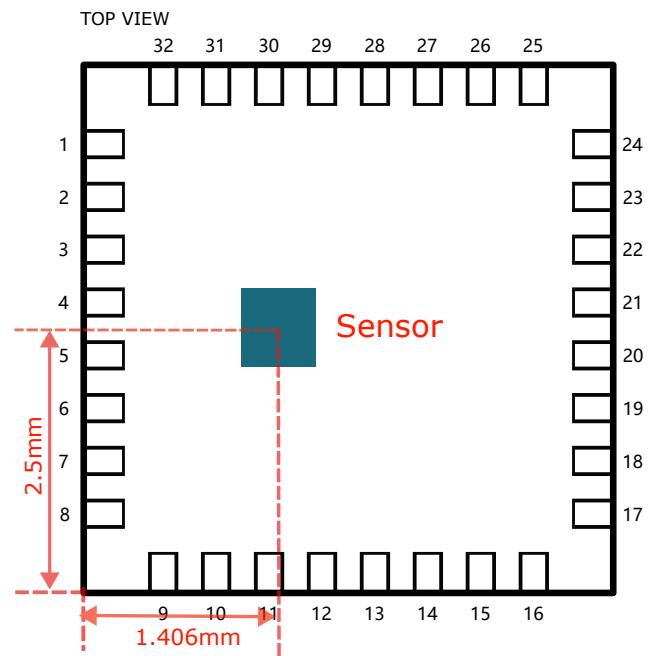


Figure 2: QFN32-5x5 Top View

2.3 Application Circuit

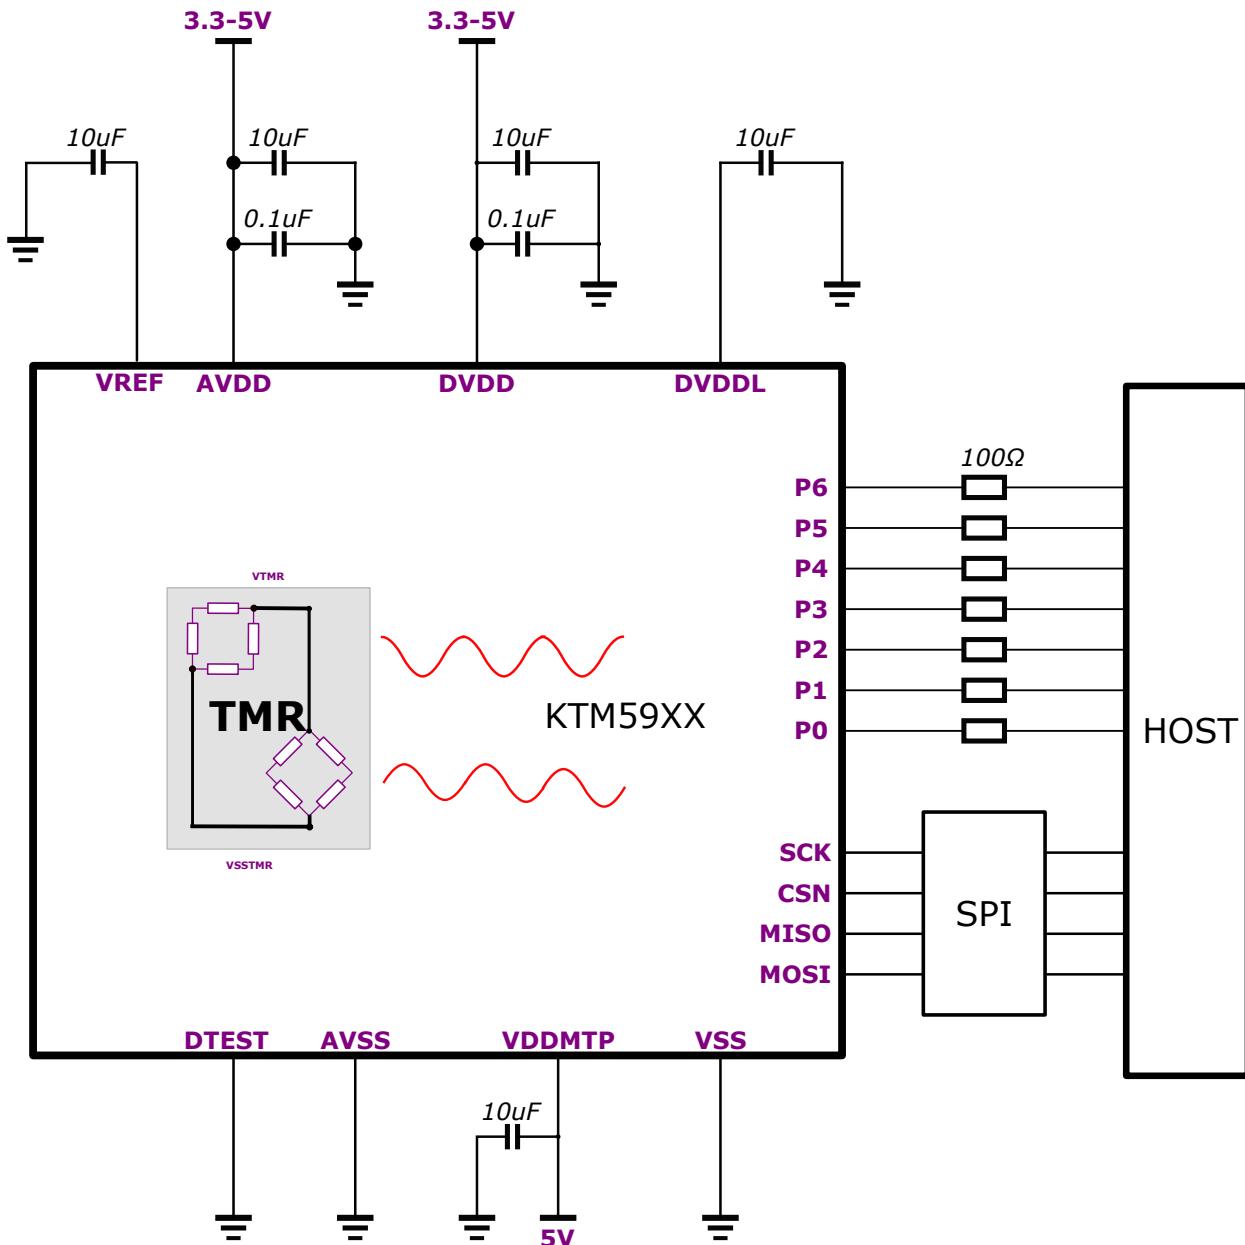


Figure 3: KTM5900 Application Circuit Diagram

The application circuit for KTM5900 is shown in Figure 3. This chip requires external sensor input in the form of sine and cosine signals. Compatible sensor types include but are not limited to AMR, TMR, and optical sensors. When using an AMR sensor, two orthogonal TMR switches can be connected to differentiate between the front and rear halves of the AMR signal. After receiving analog input, KTM5900 can convert it into absolute angle information and transmit it to the control processor HOST through interfaces such as ABZ, UVW, SPI, and others. Ports P0-P5 can be programmed as ABZ, UVW, or their differential signals \sim ABZ, \sim UVW. **It is important to note that the recommended capacitors in the schematic are necessary for ensuring system accuracy and stability.**

2.4 Normal Operating Parameters

Parameter	Min.	Typical	Max.
Operating Voltage DVDD, AVDD	3.0V	3.3V-5V	5.5V
MTP Programming Voltage VDDMTP	4.5V	5V	5.5V
Magnetic Field Strength	10mT	30mT	150mT
Operating Current		32mA	
Startup Time		23ms	
Delay Time		0.5us	
Operating Temperature	-40°C		125°C
Rotation Speed		180,000rpm	
ESD (HBM)		±5KV	

Table 2: Operating Parameters with External AMR Sensor

2.5 External Magnet Parameters

Para.	Description	Min	Typ.	Max	Unit
D_{mag}	Magnet Diameter, 10mm, radially magnetized pair recommended		10		mm
T_{mag}	Magnet Thickness, 2.5mm recommended		2.5		mm
B_{pk}	Magnetic Field Strength on Surface	30		150	mT
AG	Air Gap: Chip-Magnet Distance		1.0	3.0	mm
RS	Rotational Speed			120	krpm
$DISP$	Eccentricity: Magnet-Chip Center Offset			0.3	mm
TC_{mag1}	NdFeB Magnet's Temperature Coefficient		-0.120		%/°C
TC_{mag2}	SmCoMagnet's Temperature Coefficient		-0.035		%/°C

Table 3: On Axis Application Magnet Parameters

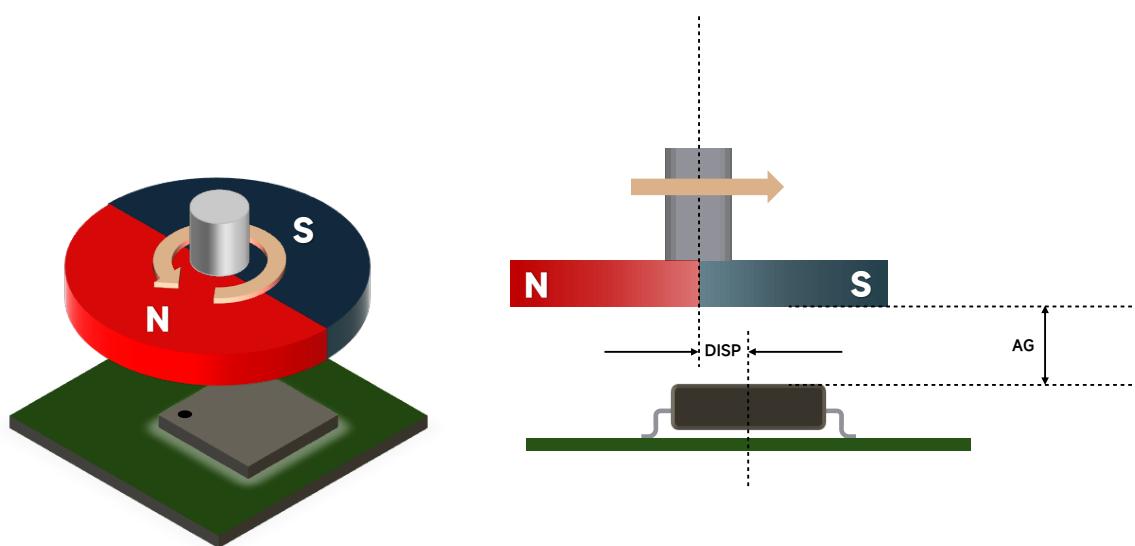


Figure 4: Magnet-Sensor Positioning

2.6 Off Axis Application Magnet Parameters

Para.	Description	Min	Typ.	Max	Unit
D_{mag}	Outer diameter of magnetic ring, radially magnetized pair recommended	6	16	30	mm
D_{mag}	Inner diameter of magnetic ring, radially magnetized pair recommended	0	10	20	mm
T_{mag}	Magnet Thickness, 2.5mm recommended	1	3	5	mm
B_{pk}	Magnetic Field Strength on Surface	30		150	mT
AG	Air Gap: Chip-Magnet Distance		0.5	5	mm
RS	Rotational Speed			120	krpm
$DISP$	Eccentricity: Magnet-Chip Center Offset	0	2.5		mm
TC_{mag1}	NdFeB Magnet's Temperature Coefficient		-0.120		$\%/\text{ }^{\circ}\text{C}$
TC_{mag2}	SmCoMagnet's Temperature Coefficient		-0.035		$\%/\text{ }^{\circ}\text{C}$

Table 4: External Magnet Parameters

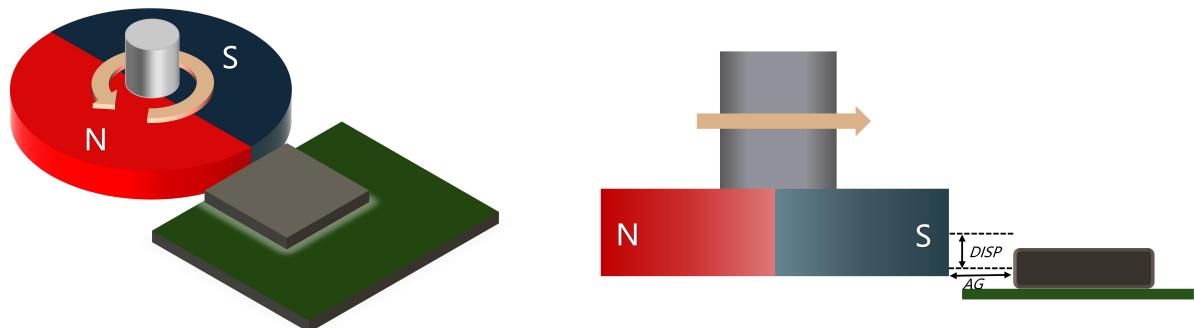


Figure 5: Magnet-Sensor Positioning

3 Electrical Parameters

Parameter	Min.	Typical	Max.
ABZ Output Frequency			20MHz
ABZ Output Current			2mA
ABZ Output Pulses	1		65,536
UVW Output Pulses	1		256
PWM Output Frequency		973Hz	
SPI Output VOH	VDD-0.4V		
SPI Output VOL		0.4V	
SPI Output VIH	0.8VDD		
SPI Output VIL		0.2VDD	
MTP Erase Cycles	1,000		
Output Noise (6 sigma)		0.01°	
Non-linearity Error		±0.025°	

Table 5: Electrical Parameters with External AMR Sensor

4 SPI Communication and MTP Control

KTM5900 provides a reliable and efficient communication method through the SPI interface, facilitating communication between microcontrollers and peripheral devices. Additionally, it features internal MTP functionality for secure storage of configurations and calibration data. The SPI communication mode used is mode 0 with CPOL=0 and CPHA=0.

4.1 SPI Timing

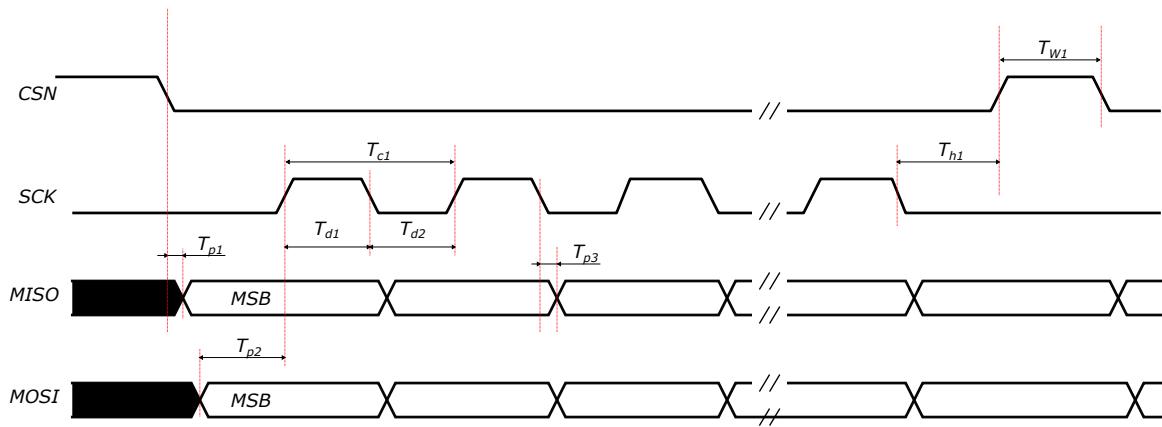


Figure 6: SPI Timing Diagram

Here, we can observe an SPI timing diagram in Figure 6 and a table of SPI timing parameters for KTM5900 products under 20pF load conditions in Table 6. This table lists the symbols for each parameter, their descriptions, and the minimum, typical, and maximum values in nanoseconds (ns). These parameters help define the timing requirements for SPI communication, ensuring reliable data transfer between microcontrollers using KTM5900 products and peripheral devices.

Symbol	Description	Min.	Max.	Unit
T_{c1}	SCK Clock Period	30		ns
T_{d1}	High Period of SCK Clock	15		ns
T_{d2}	Low Period of SCK Clock	15		ns
T_{p1}	Time interval between CSN falling edges and Valid data	50		ns
T_{p2}	Time interval between Valid data output and first SCK rising edges	15		ns
T_{p3}	Time interval between SCK falling edges and Valid data	8		ns
T_{h1}	Time interval between last falling edges and CSN rising edges	12.5		ns
T_{w1}	Hold Time of CSN	20		ns

Table 6: SPI Timing Parameters (with 20pF load conditions)

KTM5900 products use the SPI interface in CPOL=0 and CPHA=0 mode for communication between microcontrollers and peripheral devices. The SPI interface consists of four lines: SCK, MOSI, MISO, and CSN, implemented according to the SPI international standard. Data is transmitted in fixed-length 32-bit packets.

This SPI timing parameter table is very useful for understanding how to correctly use and debug the hardware and firmware design of the SPI interface. Please note that to ensure reliable data communication, hardware and firmware design should adhere to these timing parameters.

All these SPI parameters mentioned above are implemented in our provided hardware and firmware, which can be configured and optimized according to your application requirements. If you encounter any issues during usage, our technical support team is available to assist you.

In summary, the SPI interface of KTM5900 products is a powerful and versatile communication tool that can be widely used for communication between various microcontrollers and peripheral devices. By correctly using and understanding these SPI timing parameters, you can fully utilize its performance to meet your specific application requirements.

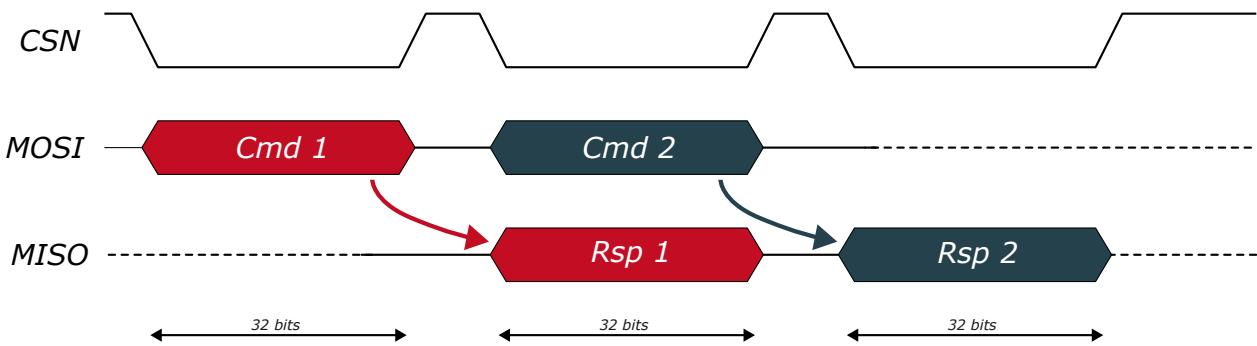


Figure 7: SPI Command and Response Timing Diagram

SPI communication employs an overlapping structure that allows sending the response of the previous command while transmitting the next command. Figure 7 illustrates an example of a single-device setup where the host controls a KTM5900 slave device.

4.2 SPI Commands

The chip supports several SPI commands as shown in Table 7:

- **Command 1: Write Multi-Pole Pair and Multi-Revolution Counter** used to configure angle output for quick configuration of multi-pole count and multi-revolution count.
- **Command 2: Register Write** writes the desired value to the corresponding register.
- **Command 3: Register Read** returns the register value for the respective address bits upon receiving the next SPI command.
- **Command 4: Angle and Status Read** returns the current angle value + status + CRC upon receiving the next SPI command.

The command length must meet specific requirements, and the specific mode used by KTM5900 products is determined by application requirements. More details will be provided when introducing detailed functionalities.

Command 1: Write Multi-Pole or Multi-Revolution Counter

31	30	29	28	1	27	26	3	25	24	23	Reserved	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
----	----	----	----	---	----	----	---	----	----	----	----------	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---	---

Command 2: Control Register Write

31	30	29	28	3	27	26	3	25	24	23	Reserved	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
----	----	----	----	---	----	----	---	----	----	----	----------	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---	---

Command 3: Control Register Read

31	30	29	28	0	27	26	2	25	24	23	Reserved	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
----	----	----	----	---	----	----	---	----	----	----	----------	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---	---

Response 3: Register Read Response

31	30	29	28	8-bit Data	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
----	----	----	----	------------	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---	---

Command 4: Angle and Internal Signal Read

31	30	29	28	0	27	26	3	25	24	23	22	21	20	19	18	17	16	15	14	13	0	12	11	10	9	8	7	6	5	4	3	2	1	0
----	----	----	----	---	----	----	---	----	----	----	----	----	----	----	----	----	----	----	----	----	---	----	----	----	---	---	---	---	---	---	---	---	---	---

Response 4: Angle and Internal Signal Response

0-54bit Revolution and Angle Output Programmable	2-bit State	8-bit CRC
--	-------------	-----------

Table 7: SPI Command List

4.3 Angle and Internal Signal Read (SPI Command 4)

Response 4 in the SPI communication protocol provides information about the angle and internal system signals. Let's break down the structure of this response:

- Angle Data (24 bits):** The response includes a 24-bit angle value. This angle value represents the current position or angle of the device.
- Revolution Count (2 bits):** Additionally, there is a 2-bit revolution count value in the response. This value indicates the number of complete revolutions the device has made.
- State Bits (2 bits):** Two bits in the response are dedicated to state information. These bits provide information about the system's status and any alarm conditions.
- CRC Data (8 bits):** The final 8 bits in the response are used for CRC (Cyclic Redundancy Check) data. CRC is a form of error-checking code to ensure data integrity during transmission.

4.3.1 Interpreting the State Bits

The 2-bit state information in the response serves to indicate different system conditions:

- High Bit (Bit 1):** When the high bit is set to 1, it signifies event alarms. These alarms are defined and configured in Section 12.
- Low Bit (Bit 0):** The low bit, when set to 1, indicates a fatal alarm condition. This could represent a severe system failure, such as a startup failure.

4.3.2 CRC Data Explanation

The CRC data, which consists of the last 8 bits of the response, plays a crucial role in ensuring the integrity of transmitted data. It is used for error-checking and verification purposes. Here's a more detailed explanation of the CRC data:

- **CRC Calculation Formula:** The CRC check employs a specific polynomial formula $X^8 + X^2 + X + 1$. This formula is used to perform a mathematical calculation on the data to create the CRC value.
- **Initial Value:** The CRC calculation starts with an initial value of 00. This initial value is part of the formula and is used in the calculation process.
- **Result XORed with FF:** After the CRC calculation is performed, the result is XORed with FF (hexadecimal) to create the final CRC value. This XOR operation is a standard step in CRC calculations.
- **Example Calculation:** Let's illustrate this with an example. Consider a response that includes a 24-bit angle, a 2-bit revolution count, and 2-bit state. If the received binary data is 1010 1100 1100 1101 1101 0000 0000 (in hexadecimal: ACC DD00), and the CRC8 checksum value is calculated as 47, the complete received data becomes 3AC-CDD0047. This means that the CRC calculation has been applied to the entire response, including the revolution count, angle, state bits, and CRC itself.
- **Optional CRC Verification:** In some cases, depending on your specific application requirements, you may choose not to perform CRC verification. If CRC verification is unnecessary for your use case, you have the option to discard the last 8 bits of data. However, it's essential to ensure data integrity through other means if CRC verification is omitted.
- **Further Information:** For a more comprehensive understanding of CRC8 checksum calculations and its application in your specific context, you can contact the Field Application Engineer (FAE) or download the detailed application note from the official website. This resource will provide you with in-depth insights into CRC calculations and best practices for implementing data integrity checks.

Abbr.	Full Name	Related Section
<i>L</i>	Linear Calibration	Section 6
<i>N</i>	Non-linear adjustment Control	Section 7
<i>F</i>	Filter Control	Section 8
<i>S</i>	SPI Serial Interface Control	Section 4
<i>M</i>	Multi Cycle Ctrl	Section 5
<i>A</i>	ABZ Incremental Interface Control	Section 9
<i>U</i>	UVW Interface Control	Section 10
<i>P</i>	PWM Interface Control	Section 11
<i>E</i>	IRQ & Event	Section 12

Table 8: Functional Block Names and Descriptions of Control Registers (ctrREG) Sections

4.4 SPI Module Control Registers

	MSB	7	6	5	4	3	S.ANGBW[5:0]	2	1	0	LSB
0xe1											
0xe3											
0xe8							S.ANGO[31:24]	3			
0xe9							S.ANGO[23:16]	3			
0xea							S.ANGO[15:8]	3			
0xeb							S.ANGO[7:0]	3			
0xec							S.RCO[31:24]	3			
0xed							S.RCO[23:16]	3			
0xee							S.RCO[15:8]	3			
0xef							S.RCO[7:0]	3			

Table 9: SPI Module Control Register ctrREG Section S

4.5 SPI Angle Output Width Configuration

The width of various signal bits in the SPI output can be customized using the **S.RCBW** and **S.AGBW** registers. In this case, the total SPI output width may not strictly adhere to the standard 32-bit or 40-bit format. These output signals always start from the Most Significant Bit (MSB), and if the actual number of bits is less, the system will pad 1's after the Least Significant Bit (LSB) to ensure data integrity and consistency.



SPI Digital Output (Current Angle) Bit Width Parameter

Used to set the bit width of SPI angle data. When it does not reach the maximum value, bit width truncation will start from the MSB of the internal register.



SPI Digital Output (Current Revolution Count) Bit Width Parameter

Used to set the bit width of SPI revolution count data. When it does not reach the maximum value, bit width truncation will start from the LSB of the internal register.

4.6 SPI Output Angle/Revolution Count Offset



SPI Output Angle/Revolution Count Offset

Users can set offsets via SPI using the **S.ANGO** and **S.RCO** registers. For example, to decrease the output angle by 90 degrees, set the data in **S.ANGO** as 0100 0000 0000 0000 0000 0000 0000 0000; to decrease the revolution count by 1 revolution, set the data in **S.RCO** as 0000 0000 0000 0000 0000 0001.

5 Multiple Pole Pairs and Multi-Turn Settings

	MSB								LSB	
0x70	7	6	5	4	M.CPR[7:0]	3	2	1	0	
0x71	7	6	5	4		3	2	M.CPR[11:8]	1	0
0x73	7	6	5	4	M.CC[7:0]	3	2	1	0	
0x74	7	6	5	4		3	2	M.CC[11:8]	1	0
0x76	7	6	5	4	M.RC[31:24]	3	2	1	0	
0x77	7	6	5	4	M.RC[23:16]	3	2	1	0	
0x78	7	6	5	4	M.RC[15:8]	3	2	1	0	
0x79	7	6	5	4	M.RC[7:0]	3	2	1	0	

Table 10: Multiple Pole Pairs and Multi-Turn Settings Register ctrREG Section M

5.1 Number of Pole Pairs Setting



Number of Pole Pairs Setting

KTM5900 allows multiple pole pairs signals, such as the magnetic grating shown in Figure ?? or the optical encoder signal shown in Figure ??, to be converted into absolute angles for one mechanical cycle or one rotation. The number of pole pairs can be easily set by configuring the M.CPR register. It's important to note that the set parameter is one less than the actual number of pole pairs. For example, if a customer is using a 32 pole pair magnet, the M.CPR should be set to 31. When the analog signal from the optical encoder is input to KTM5900, KTM5900 will output the corresponding angle from 0-360° for one rotation of the optical encoder.

5.2 Current Number of Pole Pairs and Current Number of Turns



Current Number of Pole Pairs Counter

The M.CC register represents the current number of pole pairs. This register is read-only. Upon initial power-up, customers can write the current number of pole pairs through SPI command 1.



Current Number of Turns

The M.RC register represents the current number of turns. This register is read-only. Upon initial power-up, customers can write the current number of turns through SPI command 1.

6 Linear Error Detection and Calibration (L)

KTM5900 integrates a linear error correction feature for eliminating linear errors caused by offset, gain, and phase errors in the x and y channels. This feature allows users to calibrate and correct linear errors, thereby improving the accuracy of their encoder applications.

The system supports two modes: online automatic calibration and manual parameter input, providing flexibility and efficiency in correcting linear errors.

6.1 Control Register ctrREG (L/Linear Calibration Function Block)

	MSB							LSB	
0x30	7	6	5	4	L.FLTD[2:0]		2	1	L.AUTO
0x31	7	6	5	4	3	L.CLR		L.LOAD	L.SYNC
0x33	L.XMAX[7:0]								
0x34	7	6	5	4	L.XMAX[15:8]		3	2	1
0x35	L.XMIN[7:0]								
0x36	7	6	5	4	L.XMIN[15:8]		3	2	1
0x37	L.YMAX[7:0]								
0x38	7	6	5	4	L.YMAX[15:8]		3	2	1
0x39	L.YMIN[7:0]								
0x3a	7	6	5	4	L.YMIN[15:8]		3	2	1

Table 11: Control Register ctrREG Function Block (Section L)

Table 11 provides a comprehensive overview of the control registers (CtrREG) used in the linear calibration process. The table displays addresses, register names, and their corresponding bit positions in a systematic and easily understandable manner. Each row in the table represents a specific register address, and its corresponding bits (B0 to B7) indicate control flags or parameters associated with that address.

ctrREG	L.AUTO
--------	--------

The L.AUTO parameter is used to enable online automatic calibration mode for respective modules. "Online" means that this calibration process is carried out in real-time, without the need to shut down or take the device offline. Real-time calibration is often essential as it can effectively reduce linear errors caused by environmental factors or device aging during operation.

ctrREG	L.FLTD [2:0]
--------	--------------

L.FLTD is a control parameter with 3 bits (i.e., ranging from 0 to 7). This parameter plays a crucial role in the automatic fitting of correction parameters (such as **L.XMAX**, **L.XMIN**, **L.YMAX**, **L.YMIN**) by the linear correction module. In particular, **L.FLTD** is used for noise filtering.

Due to the presence of noise in the measurement process, noise filtering is necessary. Here, the **L.FLTD** parameter is used to control the depth of the filter.

A higher value results in deeper filtering, which typically produces more stable correction parameters.



When the **L.CLR** parameter is set to 1, it clears the existing calibration parameters. The cleared calibration parameters are data used by KTM5900 for linear calibration, not the values of the registers.



L.SYNC is an instruction for reading automatically calculated linear calibration values. After being set to 1, calibration values can be read through the **L.XMAX**, **L.XMIN**, **L.YMAX**, **L.YMIN** registers.



Corresponding to **L.SYNC**, **L.LOAD** is used to write respective parameters back into the funREG. After being set to 1, it writes the values of the **L.XMAX**, **L.XMIN**, **L.YMAX**, **L.YMIN** registers into the calibration module.



L.XMAX, **L.XMIN**, **L.YMAX**, and **L.YMIN** are the maximum and minimum values for the analog signals SIN and COS, respectively.

- **Recommended steps for automatic linear calibration:** Set **L.FLTD** to 2 or a greater value, run the motor for a few revolutions to reach a stable state, set the register **L.AUTO** to 1 to start automatic calibration. After the motor has run for more than 10 revolutions, the linear calibration is complete. Set **L.SYNC** to 1 to synchronize the calibration values to the registers **L.XMAX**, **L.XMIN**, **L.YMAX**, and **L.YMIN**. Use the MTP write instruction **TOP.MCMD** set to 0x02 to write the linear calibration values into MTP (see Section 11), to ensure that the values are not lost when power is turned off.

- **Recommended steps for manual linear calibration:** Collect the maximum and minimum values of the sine and cosine analog signals, and write them into the corresponding registers `L.XMAX`, `L.XMIN`, `L.YMAX`, and `L.YMIN`. After setting `L.LOAD` to 1, KTM5900 will automatically load the values of the registers `L.XMAX`, `L.XMIN`, `L.YMAX`, and `L.YMIN` into the linear calibration module. When the calibration effect appears to be good, use the MTP write instruction `TOP.MCMD` set to 0x02 to write the linear calibration values into MTP (see Section 11), to ensure that the values are not lost when power is turned off.
- The system automatically fits linear error (gain error, offset error, phase error) parameters based on real-time motion information of the motor. Although it is not required that the motor must operate in a high-speed stable state, it is recommended to perform the calibration in such a state to improve the accuracy and speed of fitting.
- After calibration is complete, the system will use the fitted parameters to perform real-time linear calibration. If environmental factors cause the linear error to change, automatic calibration can be restarted to update the parameters.
- If the system's linear error changes slowly, consider keeping the automatic calibration mode continuously enabled. In this way, the system will adjust the fitting parameters in real-time to adapt to changes in error.

7 Non-linear Error Detection and Correction Module (N)

In KTM5900, the non-linear error detection and correction module (referred to as the N module) is crucial for ensuring high precision and reliability in the angle encoder system. Due to their physical properties and limitations in the manufacturing process, angle encoders' output signals may be affected by non-linear errors. These errors can cause a deviation between the encoder output and the actual angle. To address this issue, we have designed a system comprising multiple specialized modules to precisely correct these non-linear errors.

	MSB							LSB	
0xa0	7	6	5	4	3	N1.INTP	N1.EN	N256.EN	
0xa1	7	6	N1.MSBI[3:0]	5	4	3	N256.MSBI[3:0]	1	0
0xa2	7	6	N1.PMTP	N1.LOCK	3	N1.AUTO	1	0	
0xaf	N256.OPR	N256.RW	5	4	3	N256.INDX[5:0]	1	0	
0xb0	N256.REG0[7:0]								
0xb1	7	6	5	4	N256.REG0[15:8]	3	2	1	0
0xb2	N256.REG1[7:0]								
0xb3	7	6	5	4	N256.REG1[15:8]	3	2	1	0
0xb4	N256.REG2[7:0]								
0xb5	7	6	5	4	N256.REG2[15:8]	3	2	1	0
0xb6	N256.REG3[7:0]								
0xb7	7	6	5	4	N256.REG3[15:8]	3	2	1	0
0xb8	N256.REG4[7:0]								
0xb9	7	6	5	4	N256.REG4[15:8]	3	2	1	0
0xba	N256.REG5[7:0]								
0xbb	7	6	5	4	N256.REG5[15:8]	3	2	1	0
0xbc	N256.REG6[7:0]								
0xbd	7	6	5	4	N256.REG6[15:8]	3	2	1	0
0xbe	N256.REG7[7:0]								
0xbf	7	6	5	4	N256.REG7[15:8]	3	2	1	0

Table 12: Non-linear Error Detection and Correction Module Registers ctrERG Section N

- One-Click Self-Calibration Module** The one-click self-calibration module can complete data iteration when the motor rotates above 200rpm. KTM5900 automatically calculates the non-linear error and stores it in MTP.
- Calibration Module (256 Points)** The 256-point calibration module provides more reference points for finer calibration. It offers 256 reference points, each with a specific angular position, optimizing angle measurement across a broader range.

Through the integrated application of these modules, KTM5900 can

effectively detect and correct non-linear errors in the angle encoder, ensuring high precision and reliable angle measurement in various application environments. This systematic approach not only enhances the accuracy of measurements but also strengthens the system's adaptability, maintaining stable and reliable performance under different working conditions.

7.1 Automatic Fitting of Errors in One-Click Self-Calibration Module



One-Click Self-Calibration Request

When **N1.AUTO** is set to 1, calibration data reference automatic fitting is enabled. In this mode, the system continuously calibrates and computes and updates the latest calibration data references. These data iterate and stabilize based on real-time operation and are temporarily stored internally, not readable externally.



One-Click Self-Calibration Module Enable

When **N1.EN** is set to 1, the calibration module is activated.



One-Click Self-Calibration Module Online Interpolation Enable

When **N1.INTP** is set to 1, the one-click self-calibration online interpolation function is enabled. This function calculates the curve interpolation between the current angle and the nearest reference point, providing smoother and more continuous calibration data, enhancing the continuity and accuracy of the output data.



Locking Calibration Results in **N1.AUTO** Mode

When **N1.AUTO** is set to 1 and **N1.LOCK** is 0, calibration data will iterate and stabilize based on operational data. Changes will continue until **N1.LOCK** is set to 1, at which point the internal registers will stop updating the computed results.



Storing Calibration Results to MTP in **N1.AUTO** Mode

When **N1.PMTP** is set to 1, the internal one-click self-calibration data will be written to MTP. Since writing to MTP takes some time, it is recommended to lock the internal calibration reference data before writing, i.e., set **N1.LOCK** to 1.

In summary, using the automatic one-click self-calibration feature involves the following steps: first, start the motor and rotate it uniformly at 4000rpm or above; second, start the calibration module by setting **N1.AUTO** to 1; third, enable one-click self-calibration online interpolation by setting **N1.INTP** to 1; fourth, wait for the motor calibration to achieve the desired effect, typically within 5s, then lock the calibration results by setting **N1.LOCK** to 1; fifth, store the calibration results to MTP by setting **N1.PMTP** to 1; sixth, enable the one-click self-calibration module by setting **N1.EN** to 1 and setting the registers involved in previous steps to 0, completing the one-click self-calibration, and stop the motor rotation.

7.2 Calibration Module (256 Points)

This module is a high-precision non-linear calibration tool that internally stores 256 precise reference point correction values. **The 256 correction values are the differences between KTM5900 and ideal values.** These reference points are evenly distributed across the angular range from 0 to 360 degrees, each corresponding to a specific angular position. This design allows the system to automatically apply preset correction values when the encoder's output signal passes these reference points or their nearby positions. Such corrections help correct the signal's non-linear errors, achieving higher accuracy and reliability in various application scenarios.

The module is particularly suitable for scenarios requiring highly precise calibration, such as in conjunction with high-precision optical encoders, ensuring data synchronization and consistency between them. This significantly enhances the overall precision and stability of the system, especially in fields like precision measurement and high-speed motion control.

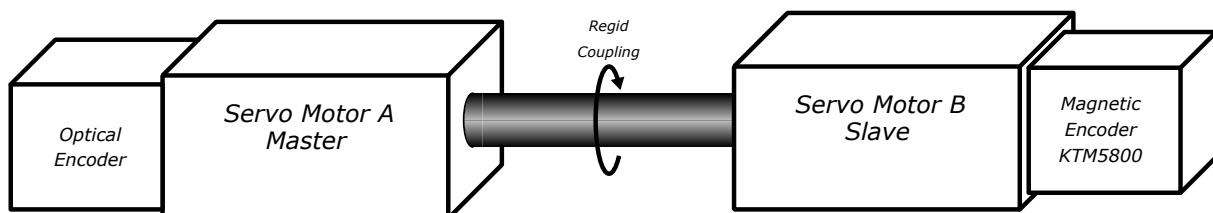


Figure 8: Non-linear Calibration in Conjunction with Optical Encoders



256 Calibration Module Enable

When `N256.EN` is set to 1, the 256-point non-linear calibration module is enabled, and calibration reference data is sourced from MTP.

7.3 Representation of Calibration Data (256 Points)

The 256-point calibration data is stored in Multi-Times Programmable memory (MTP). The calibration data for each reference point is represented by 16 bits, collectively named `N256.REF[255:0]`.



MTP Calibration Data (256 Points) MSB Index

KTM5900 internal angle data is 30 bits, while calibration data is only 16 bits. The `N256.MSBI` register specifies which position in the 30-bit angle data the 16-bit calibration data's Most Significant Bit (MSB) should correspond to.

Since the 256-point correction value is the difference between the magnetic position and the ideal value, the error angle represented by the correction value `angle.error` is a signed floating-point number between negative 180° and positive 180°. The correction value is calculated as follows, and the two's complement is taken for negative values.

$$\text{N256.REF}[x] = \text{unsigned}(\text{angle.error} \times \frac{65536}{360} \times 2^{(12 - \text{N256.MSBI})})$$

Application Example

Assuming the input angle is $ANG_{in} = 45$ degrees, to calculate the calibration error angle, we can follow these detailed steps:

1. Determine the reference point: First, determine the calibration reference point corresponding to the 45-degree angle. In KTM5900, we have 256 calibration reference points evenly distributed from 0 to 360 degrees. Since each reference point covers an angle of about $360/256 \approx 1.40625$ degrees, the 45-degree angle roughly corresponds to the 32nd reference point, i.e., the 16-bit reference point `N256.REF[31]` (since indexing starts from 0).

2. If the angle error `angle.error` is -1° and `N256.MSBI` is 13, the correction value is calculated using the following formula:

$$\text{N256.REF}[31] = \text{unsigned}(-1 \times \frac{65536}{360} \times 2^{(12-13)}) = 65445$$

8 Filter Module (F)

KTM5900 incorporates a dedicated low-pass filter capable of operating in fixed bandwidth and adaptive dynamic modes, used for real-time processing of angle and velocity data. This filter enables users to obtain smoother and more accurate measurements of angle and velocity.

Table 13 lists the various addresses and corresponding data bits used for the digital filter. These parameters are primarily used to adjust the filter bandwidth, operating modes, etc.

	MSB									LSB
0xc9	7	6	F.IWP[3:0]	5	4	3	2	F.IRP[3:0]	1	0
0xca					F.IRA[7:0]					
0xcb	7	6	5	4	3	2	F.IRA[11:8]	1	0	
0xd0	7	6	5	4	3	2	1	F.HMOD		
0xd1				F.HYST[7:0]						
0xd2	7	6	5	4	F.HYST[15:8]	3	2	1	0	

Table 13: Control Registers for the Filter (Section F)

8.1 Parameters of the Dedicated Low-Pass Filter

The dedicated low-pass filter has several important parameters that can be used to finely adjust the filter's performance and characteristics, including but not limited to the filter's depth¹, reset angle, and reset strength.

 F.IWP [3:0]

Filter Working Depth Coefficient

¹"Filter depth" is not a standard academic term, but it is widely used in engineering practice. Generally speaking, a filter with a deep depth (large numerical value) refers to a filter with a relatively small bandwidth, high noise removal capability, but slower response.

F.IWP is a key parameter for controlling the depth or working strength of the filter. This parameter has a significant impact on the mathematical model of the filter. The larger the value of F.IWP, the deeper the filtering depth, the less the noise, and the slower the response of KTM5900. The default value of F.IWP is 8, and it is generally not recommended for customers to set F.IWP greater than 9.

Filter Reset Critical Angle

 F.IRA [11:0]

When the dedicated low-pass filter is enabled, the F.IRA parameter allows the system to automatically reset the filter when the difference between the input and output angles of the filter module exceeds the critical angle controlled by F.IRA. This is a very useful adaptive mechanism, especially suitable for when the system's state changes significantly.

$$\text{Filter Reset Critical Angle} = \text{F.IRA} \times \frac{360^\circ}{4096} \quad (1)$$

Filter Reset Depth Coefficient

 F.IRP [3:0]

Meanwhile, `F.IRP` is used to precisely control the "strength" of the filter during a reset. When the system detects a need for a filter reset, the original filter working depth coefficient `F.IWP` will be temporarily replaced by the filter reset depth coefficient `F.IRP`. The value of `F.IRP` can be set to the same value as `F.IWP`.

8.2 Hysteresis Settings

Hysteresis, also known as magnetic lag, is a common term in the automation industry, typically used to describe a phenomenon in sensors when detecting objects or measuring physical changes. Hysteresis can be defined as the error amount between the applied control signal and the system's resulting changes. In KTM5900, hysteresis is placed at the filter output position to prevent extremely minor signal interferences from causing high-order changes in the angle signal.

In KTM5900, fixed offset hysteresis is provided. When the direction changes, the lag module will offset the input angle with a preset hysteresis value. This means that when using this type of hysteresis, there will be a fixed angle offset in a certain direction (clockwise or counterclockwise). The figure below shows an example of input and output angles.

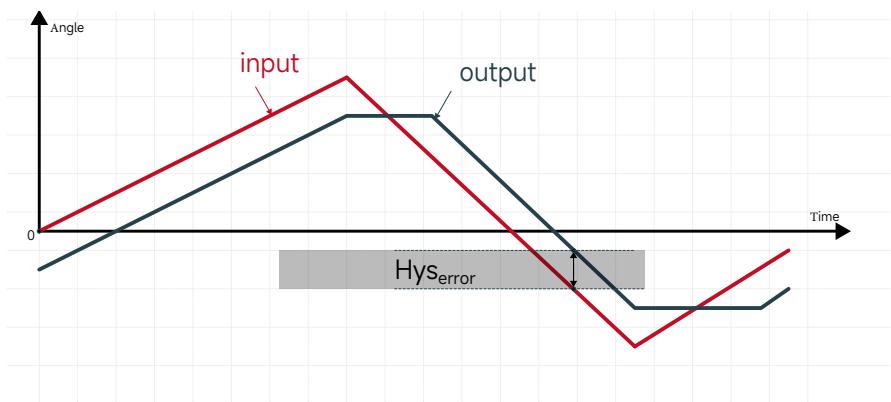


Figure 9: Fixed Offset Hysteresis.

ctrREG F.HYST [15:0]

Hysteresis Error Value

Comprising a 16-bit unsigned integer (*unsigned*), used for setting the hysteresis angle, and the correspondence with the angle is calculated according to the formula below.

$$\text{Hysteresis Error (degrees)} = 5.625^\circ \times \frac{\text{unsigned}(\text{F.HYST})}{2^{16}} \quad (2)$$

This type of hysteresis setting is located at the output position of the filter in the KTM5900 chip, ensuring that the system maintains a stable output in the presence of changes in sensor signals or noise, thereby providing more accurate measurement and control. By utilizing the hysteresis effect, the KTM5900 chip can reduce false alarms caused by temporary fluctuations or noise, ensuring that the system provides reliable performance under various conditions.

9 ABZ Encoder Output Module (A)

ABZ signal output is a common form of output for angle encoders. It provides encoder position information mainly through three signal lines, namely *A*, *B*, and *Z*². Among them, *A* and *B* signals are two orthogonal signals with a phase difference of 90 degrees, used to determine the rotation direction and relative position of the encoder; the *Z* signal is a pulse signal that appears only once per revolution, used to provide an absolute position reference for the encoder.

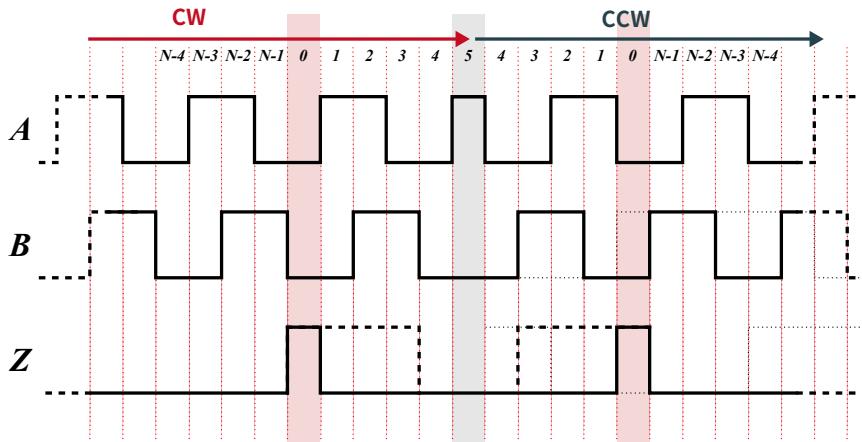


Figure 10: ABZ Output Timing

In KTM5900, we have a dedicated module to control the output of ABZ signals, as shown in Figure 12. The main function of this module is to convert the internal numerical angle values into *A*, *B*, *Z* digital signal outputs. To better adapt KTM5900 to various application scenarios, we provide users with modifiable related parameters, such as resolution, output frequency, and signal polarity.

The angular position increment output of KTM5900 is accomplished by outputting incremental signals *A* and *B*. AB incremental signals have a maximum of **24-bit resolution**³, meaning that in each **rotation cycle**⁴, it can provide up to $2^{24} = 16'777'216$ steps, and *A*, *B* signals each have an accurate $PPT = 2^{24}/4 = 4'194'304$ pulse cycles per revolution.

For the convenience of users in setting the operating parameters of ABZ, we store these parameters in Section A of CtrREG, and the specific settings are shown in Table 18.

²We can refer to Figure 10, where the phase difference between *A* and *B* signals is used to indicate the direction of rotation. Specifically, when rotating clockwise, the *A* signal leads while the *B* signal follows; conversely, when rotating counter-clockwise, the *B* signal leads while the *A* signal follows. Notably, during the power-up period, all three ABZ signals maintain a high level.

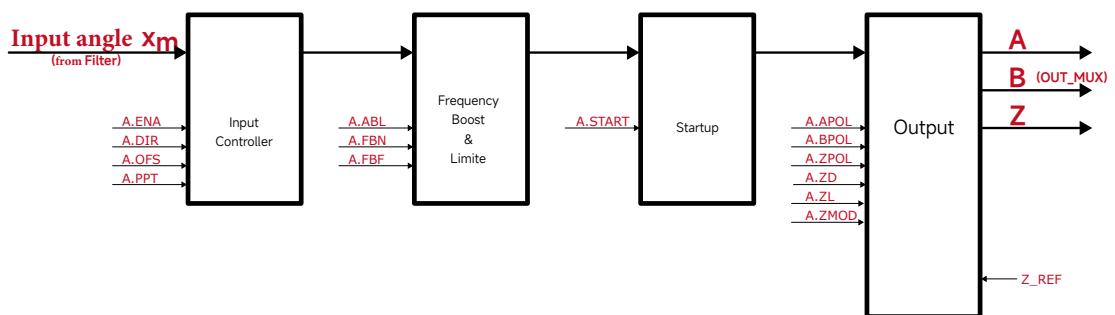


Figure 11: System Structure of ABZ Module

³In the engineering field, Period Per Turn PPT is commonly used to represent resolution. For a 24-bit resolution, $PPT = 2^{\text{resolution bits}}/4$, and this parameter is controlled by

⁴A.PPT. Incremental interface is a common interface method that can provide continuous position information.

⁴In multi-turn applications, the standard is based on one full rotation of the outer circle.

	MSB								LSB							
0xf0	7	6	5	A.ZPOL	A.BPOL	A.APOL	A.DIR	A.ENA	7	6	5	A.ZL[1:0]	A.ZD[1:0]	A.ZMOD[1:0]	0	
0xf1																
0xf2																
0xf3																
0xf4	7	6	5		A.PPT[7:0]				7	6	5	A.PPT[15:8]	A.PPT[23:16]	2	1	0
0xf5																
0xf6																
0xf7	7	6	5		A.OFS[7:0]				7	6	5	A.OFS[15:8]	A.OFS[23:16]	2	1	0

Table 14: Control Registers for ABZ ctrERG Section A

9.1 Input Control

ctrREG	A.ENA
--------	-------

Module Enable Parameter

This parameter controls the start and stop functionality of the ABZ module. The default value is 1, indicating that the module is enabled. However, when set to 0, the ABZ module will stop working, and both the module's input and output will be paused. **To change the operating parameters of the ABZ module, we need to follow the steps listed in Table 15.** First, we need to turn off the ABZ module, then change the required parameters, which can be rewritten directly through SPI or read from MTP. After completing all parameter changes, restart the ABZ module, and it will operate with the new parameters.

Please note: When A.ENA =1, all changes to the ABZ control registers listed in Table 18, except for A.ENA, will not be immediately reflected in the operating registers and will not immediately change the actual operating parameters of ABZ. To change the module's operating parameters, the steps mentioned above must be followed.

ctrREG	A.DIR
--------	-------

Input Angle Direction Parameter

This parameter is used to control the rotational direction of the ABZ signals. Its default value is 0. However, when we set it to 1, the input angle value of the ABZ module will be reversed.⁵ If for some reason, such as assembly or the definition of rotation direction, it is necessary to adjust the direction of the ABZ signal output, we can achieve this by changing A.DIR.

ctrREG	A.OFS [15:0]
--------	--------------

Angle Offset Parameter

This is a 16-bit unsigned value used to set the angle offset for ABZ output. This offset value will be added to the high 16 bits of the ABZ module's input angle. Using the following formula, we can calculate the actual angle offset value:

$$\text{ABZ Output Angle Offset (degrees)} = 360^\circ \times \frac{\text{A.OFS}}{2^{16}} \quad (3)$$

ctrREG	A.PPT [23:0]
--------	--------------

Step	Description
1	Disable the ABZ module, set A.ENA =0.
2	Change the relevant parameters. Parameters can be rewritten directly through SPI or read from MTP.
3	Restart the ABZ module, set A.ENA =1. At this point, ABZ will operate with the new parameters.

Table 15: Steps for Rewriting Control Registers of ABZ

⁵For example, when the A signal leads the B signal by 1/4 cycle during positive direction rotation, then in the negative direction rotation, the A signal will lag the B signal by 1/4 cycle.

Angle Resolution Parameter

Resolution is used to describe the smallest angle that the ABZ signal can discern per turn. To accommodate multi-turn applications, A.PPT is designed as a 24-bit unsigned integer. Its default value is 4095 (4096 lines), used to determine the resolution of ABZ. Even in multi-turn applications, each turn of rotation is still calculated as 360 degrees. The correlation between A.PPT and the actual resolution can be seen in Table 16. The actual resolution can be calculated through the following formula:

A.PPT [23:0]	AB	AB
	Resolution Pulses/Turn	Steps per Turn Steps/Turn
0	1	4
1	2	8
2	3	12
...
1021	1022	4088
1022	1023	4092
1023	1024	4096

Table 16: ABZ Resolution

$$\text{Actual Resolution (degrees)} = \frac{360^\circ}{(A.PPT + 1) \times 4} \quad (4)$$

9.2 ABZ Output Frequency Limiting



ABZ Output Maximum Frequency Limit Parameter

The A.ABL parameter is used to set the maximum output frequency for the A and B signals. With a main frequency of 80MHz, we can use the following formula to calculate the actual maximum frequency limit for the A or B signal:

$$\text{Maximum Frequency}[MHz] = \frac{20MHz}{A.ABL + 1} \quad (5)$$

Based on this maximum frequency limit, we can also calculate the maximum rotation speed for ABZ:

$$\text{Maximum Rotation Speed}[rpm] = 60 \times \frac{20MHz}{A.ABL + 1} \times \frac{1}{A.PPT + 1} \quad (6)$$

However, it's important to note that if the rotation speed exceeds this maximum frequency limit, the A and B signals will output at the maximum frequency. Additionally, depending on the settings of the IRQ module, the system may issue an overspeed warning. In such cases, due to the mismatch between the frequency of A and B and the actual rotation speed, the angle values obtained from the output of the ABZ module may lag behind the actual angle values.

This frequency limiting mechanism plays a vital role in ensuring the stability and reliability of the ABZ signal output. By preventing the A and B signals from exceeding the maximum frequency, it helps to avoid potential issues caused by signal distortion or processing limitations of the receiving system. Users should carefully set the A.ABL parameter according to the specific requirements of their application scenario to ensure optimal performance of the ABZ encoder output.

9.3 Output Control



Inversion Parameters for Signals *A*, *B*, and *Z*

These three parameters are all set to 0 by default. When set to 1, they will correspondingly invert the *A*, *B*, and *Z* signals. This inversion feature can be very useful in certain specific application scenarios, for example, when the polarity of the output signal is opposite to what is expected, this feature can be used for adjustment.

ctrREG A.ZMOD [1:0]

Z Signal Output Mode Parameter

The output mode of the *Z* signal⁶ varies with different settings, corresponding to different output modes. Different output modes can meet different application needs, ensuring that the chip can adapt to various working environments. Please refer to Table 17 for specifics.

A.ZMOD	<i>Z</i> Signal Output Mode
00	No <i>Z</i> output
11	No <i>Z</i> output
01	Controlled by chip pin <i>ZREF</i>
10	Normal mode

Table 17: *Z* Signal Output Modes

- When A.ZMOD = 00 or A.ZMOD = 11, no *Z* output pulse is generated, and the *Z* output is in an inactive state⁷.
- When A.ZMOD = 01, a *Z* pulse is generated only when chip pin *ZREF* = 1. This mode is suitable for linear or rotational applications where the CPR (Counts Per Revolution) is 1⁸.
- When A.ZMOD = 10, a *Z* pulse is generated (synthesized) at the output position determined by ABZPH for each revolution. This is a common mode for single-turn incremental and multi-turn absolute applications⁹.

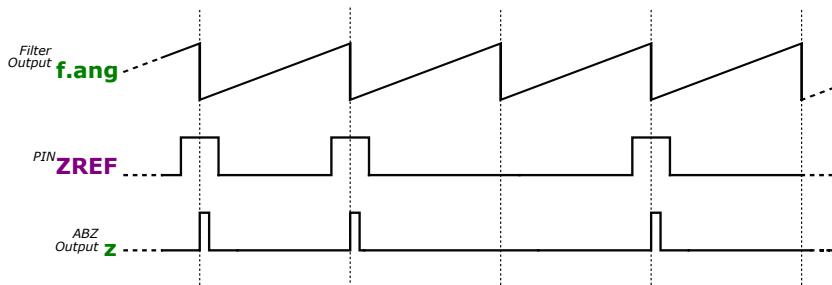


Figure 12: Diagram for A.ZMOD = 10, indicating the selection of the *Z* signal

ctrREG A.ZD [1:0]

ctrREG A.ZL [1:0]

Position and Width of the *Z* Signal

The rising edge of the *Z* signal occurs once per revolution at the zero position. The position and width of the *Z* signal can be set using ZL [1:0] and ZD [1:0] bits. By default, the ZL [1:0] and ZD [1:0] parameters are both set to 00¹⁰.

⁶*Z* signal, also known as the Index signal or zero position signal. In encoder applications, the *Z* signal is often used to provide a reference point to help the system determine the exact position of the object.

⁷This mode is typically used in applications that do not require *Z* signal output.

⁸In this mode, the generation of the *Z* pulse is closely related to the state of the external pin *ZREF*, providing users with a flexible way to control the output of the *Z* pulse.

⁹Multi-turn absolute applications are typically used in applications where it's necessary to track the position of an object across multiple complete rotations, such as in motor position control.

¹⁰This means that, if no settings are made, the position and width of the *Z* signal will both be their default values.

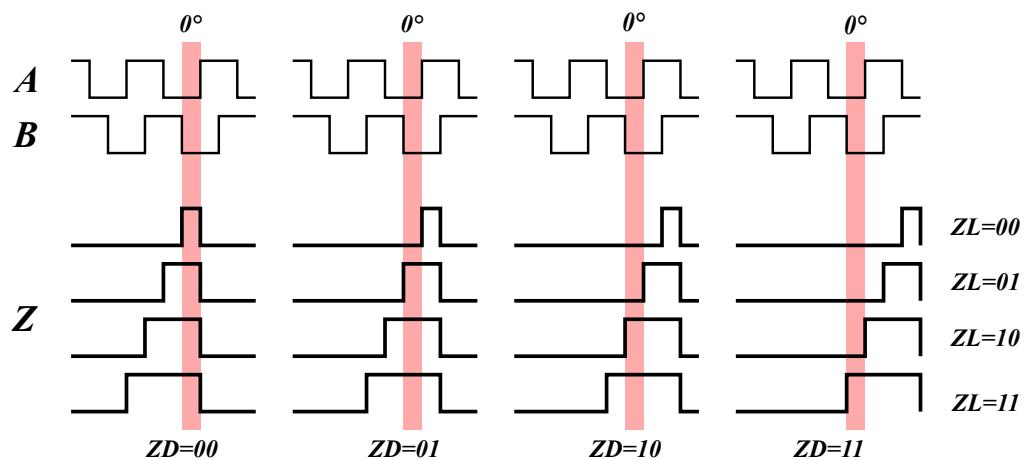


Figure 13: Width ZL and Position ZD of the Z Signal for AB

10 UVW Encoder Output (U)

The simulation of UVW output signals is crucial for the efficient commutation of three-phase motors. These signals emulate the output of three Hall effect sensors, characterized by a 50% duty cycle and a phase shift of 120°, ensuring the smooth operation of the motor.

The UVW module receives a 16-bit binary angle value as input, whose direction can be set through `U.DIR`. The input angle can also be offset through `U.OFS` to correct the output waveform. The polarity of the output signals u , v , and w can be controlled via `U.POL`.

Figure 14 shows the ideal waveform of UVW output signals during the rotation of a single pole pair rotor. The duty cycle and phase shift of the signals have a significant impact on motor performance.

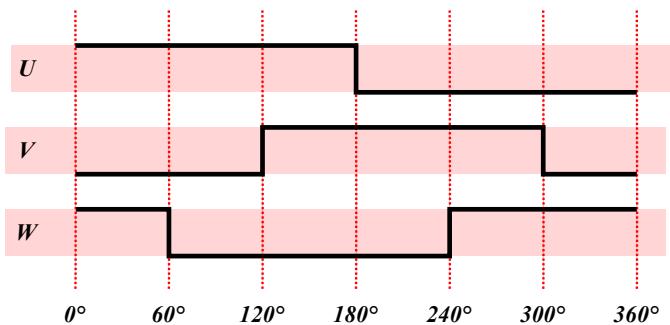


Figure 14: UVW Output Waveform during the Rotation of a Single Pole Pair Rotor

For motors with a different number of pole pairs, the UVW signal output mode needs to be adjusted accordingly. As shown in Figure 15, the output waveform for a two-pole pair (four-pole) rotor is distinctly different from that of a single pole pair. This difference is crucial for the motor control system, as it allows for more precise control and adjustment.

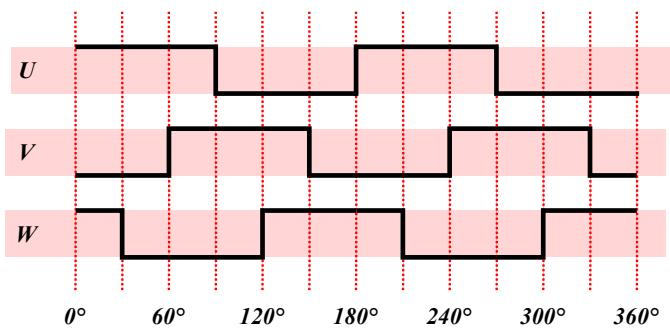


Figure 15: UVW Output Waveform during the Rotation of a Two Pole Pair Rotor

KTM5900 series chips accommodate motors with different numbers of pole pairs by setting the `U.PPT` register, allowing for software-based subdivision of commutation steps, thereby generating the required multiple UVW cycles for every 360° rotation. This is crucial for various motor designs, ensuring the versatility of the chip's application.

	MSB							LSB	
0x100	7	6	5	4	3		U.POL	U.DIR	U.ENA
0x101	7	6	5	4	U.PPT[7:0]	3	2	1	0
0x102					A.OFS[7:0]				
0x103	7	6	5	4	A.OFS[15:8]	3	2	1	0

Table 18: UVW Control Register Table

Here are detailed explanations of the control registers for UVW output signals:



UVW Enable Parameter

When this register is set to 1, the UVW module is activated; when set to 0, the module is turned off. **Only when this register is set to 0 can the UVW-related registers below be changed.**



UVW Direction Parameter

This register controls the sign of the angle input, thereby determining the rotation direction of the motor. A binary value of 1 represents the positive direction, and 0 represents the reverse direction.



UVW Polarity Parameter

The **U.POL** setting controls the level direction of the output signal to meet the requirements of different types of motors. When set to 1, the output is of positive polarity; when set to 0, it is of negative polarity.



UVW Offset Parameter

This register is used to fine-tune the phase of the UVW signal to optimize motor performance. Slight adjustments to the input angle allow for precise control of motor speed and position.



UVW Pole Pair Parameter

The [2:0] bits of `U.PPT` are used to set the number of pole pairs of the chip, enabling the KTM5900 chip to support motors with different numbers of pole pairs through software configuration.

$$\text{Actual Number of Pole Pairs} = \text{unsigned}(\text{U.PPT}) + 1 \quad (7)$$

This flexibility is crucial for adapting to various motor specifications, ensuring that the output signals match the actual needs of the motor, thereby achieving efficient and precise motor control.

With the configuration of these registers, the KTM5900 chip provides a powerful tool for implementing complex motor control strategies. Whether in low-speed or high-speed, simple or complex motor applications, precise UVW signal output ensures the optimization of motor performance.

11 Overall System Configuration (TOP)

	MSB									LSB
0x10	<code>TOP.\$SEL</code>	6	5	4	3	2	<code>TOP.P05[3:0]</code>	1	0	
0x11	7	6	5	4	3	2	<code>TOP.P6[2:0]</code>	0		
0x12	7	6	5	4	3	2	<code>TOP.SSTATE[4:0]</code>	1	0	
0x140	7	6	5	4	<code>TOP.MWE[7:0]</code>	3	2	1	0	
0x141	7	6	5	4	<code>TOP.MCMD[7:0]</code>	3	2	1	0	

Table 19: Overall System Configuration ctrERG Section TOP

11.1 Chip and Magnetic Sensor Connection Settings



Sensor Selection Parameter

KTM5900 is designed with flexibility, supporting connections to both AMR (Anisotropic MagnetoResistance) and TMR (Tunnel MagnetoResistance) sensors. These two types of sensors differ in their physical properties. In particular, AMR sensors can only output the absolute value of the magnetic field strength and do not provide information on the direction of the magnetic field. In contrast, TMR sensors can provide information on the direction of the magnetic field. Therefore, users need to set the `TOP.SSEL` parameter to inform the KTM5900 chip whether an AMR sensor or a TMR sensor is being used.

0 = TMR sensor; 1 = AMR sensor.

11.2 Parallel Output Pin Configuration P0 to P6

KTM5900 includes 7 parallel output ports, from `P0` to `P6`. These ports are highly flexible and configurable, capable of outputting a variety of signals such as `a`, `b`, `z`, `u`, `v`, `w`, and clock signals. The specific signal selection depends on the configuration of `TOP.P05` and `TOP.P6`.



IO Mode Setting

`TOP.P05` is used to configure the behavior of `P0` to `P5`. The following table shows the functionality of each pin under different configurations:

<code>TOP.P05</code>	<code>P5</code>	<code>P4</code>	<code>P3</code>	<code>P2</code>	<code>P1</code>	<code>P0</code>
0000	HiZ			HiZ		
0001	HiZ			+ a	b	z
0010	HiZ			+ u	v	w
0100	+ a	b	z			HiZ
0101	+ a	b	z	- a	b	z
0110	+ a	b	z	+ u	v	w
1000	+ u	v	w			HiZ
1001	+ u	v	w	+ a	b	z
1010	+ u	v	w	- u	v	w



P6 Pin Function Selection

`P6` pin function selection, which can be configured as input or output. The following table shows the functionality of `P6` under different configurations:

<code>TOP.P6</code>	Input/Output	<code>P6</code>
000/other	None	Z
001	Output	pwm
100	Input	Calibration trigger signal calibration
101	Input	Zero signal zero
110	Output	Chip internal clock sysclk



Current startup state machine status, used for debugging. After power-up, only when this register is 15 does it indicate that KTM5900 has started successfully.

11.3 MTP Read/Write Control



MTP lock register. Write 0xc5 to unlock the MTP command register. Reading returns whether the MTP command register is writable.



`TOP.MCMD` is the MTP command register.

- 0x0 - IDLE
- 0x2 - Write Configuration (All registers changed by the user will be written to MTP for saving, they won't be lost when power is turned off)

12 Alarms and Detection (IRQ)

	MSB								LSB
0x120	7	6	5	4	3	2	1	0	IRQ.OD
0x123	7	6	5	4	IRQ.SIE[7:0]	3	2	1	0
0x124	7	6	5	4	IRQ.SIE[15:8]	3	2	1	0
0x129	7	6	5	4	IRQ.STA[7:0]	3	2	1	0
0x12a	7	6	5	4	IRQ.STA[15:8]	3	2	1	0

Table 20: Alarm and Detection Registers (Section IRQ)



Interrupt Pin Configuration

IRQ.OD determines the output method of the interrupt pin. When set to 0, the interrupt pin is a push-pull output, suitable for scenarios requiring strong driving capability. When set to 1, the interrupt pin is an open-drain output, suitable for scenarios where multiple outputs need to be connected on the same line, such as sharing interrupt signals among multiple devices.



Alarm Status

In the IRQ module, the IRQ.STA register plays a crucial role in latching and clearing specific alarm states. This register contains multiple bits, each representing a specific state or error in the system. Here are detailed explanations of these bits:

AMR Input Sine/Cosine Amplitude Anomaly

IRQ.STA [2]= `alarmAmp`

When the amplitude of the sine or cosine signal input from the AMR sensor is too low or too high, this bit will be set. This may be due to sensor damage, signal path interference, or configuration errors.

tmrMisMatch - TMR Input Mismatch

IRQ.STA [6]: Indicates that the TMRO and TMR1 timer inputs are inconsistent with the sine/cosine signal input from the AMR sensor, possibly due to signal asynchrony, clock errors, or other hardware issues.

filterDelay - Excessive Filter Lag

IRQ.STA [7]: This bit will be set when the response lag of the filter exceeds the set normal range, usually indicating improper filter configuration or insufficient processing capacity.

abzLimit - ABZ Output Limit

IRQ.STA [8]: If the output speed of the ABZ encoder exceeds the system's processing

capacity or preset safety limits (**A.ABL**), this bit will be set, usually indicating system performance issues or potential hardware failure.

abzFatal - Severe ABZ Output Lag

IRQ.STA [9]: When the lag of the ABZ encoder output exceeds 180 degrees, this bit is set, indicating that position data may be inaccurate or lost, usually due to serious faults in the encoder or driving circuit.

crcFail - SPI CRC Decoding Error

IRQ.STA [10]: The setting of this bit indicates an error in the CRC check of data received via SPI communication, possibly due to transmission errors, signal interference, or hardware failures.

mtp1bit - MTP Single Bit Error Detected

IRQ.STA [11]: This bit is set when a 1-bit error is detected by the MTP (Multi-Times Programmable Memory), possibly due to memory damage, programming errors, or hardware faults.

uvderVol - Undervoltage Detected

IRQ.STA [12]: This bit is set when a voltage lower than the normal operating range is detected, possibly due to unstable power supply, power adapter failure, or system circuit issues.

overVol - Overvoltage Detected



IRQ.STA [13]: When the system detects a voltage exceeding the safe operating range, this bit is set. Excessive voltage can cause system damage or unstable operation and usually requires immediate inspection of the power supply and circuit.




Status Interrupt Enable Configuration

IRQ.SIE allows the system to enable or disable the IRQ PIN foot output alarm function. Corresponds bit by bit with **IRQ.STA**. For example, if bit13 of **IRQ.SIE** is set to 1, an alarm will be output by IRQ when overvoltage occurs. If bit13 is 0, no alarm will be output by IRQ for overvoltage.

13 Package Information

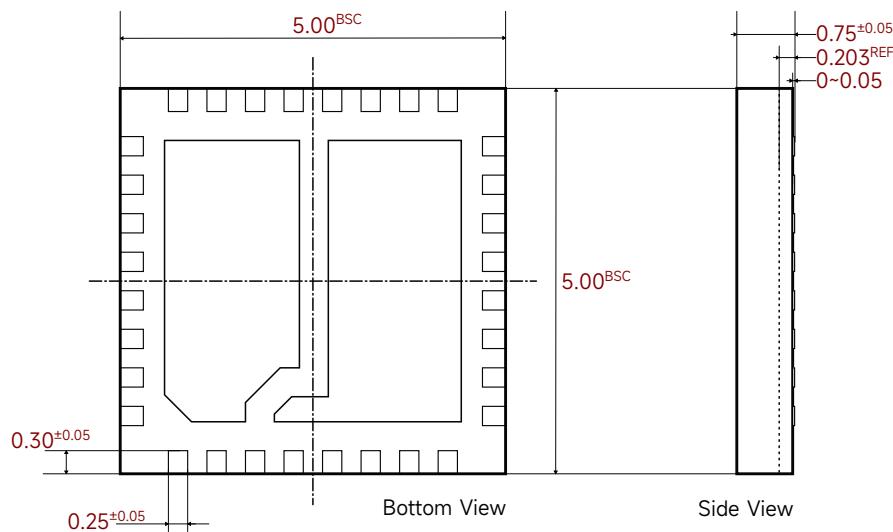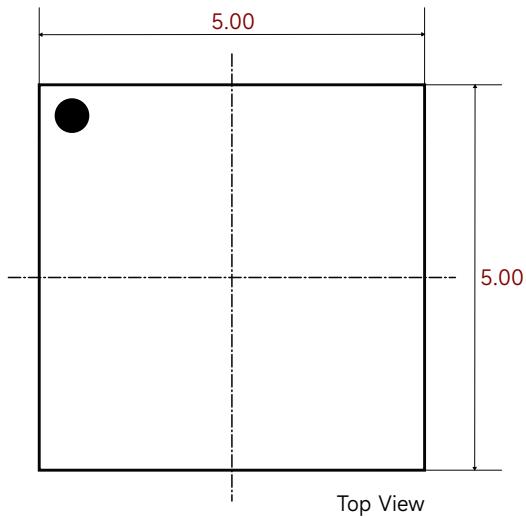

14 Recommended Pad

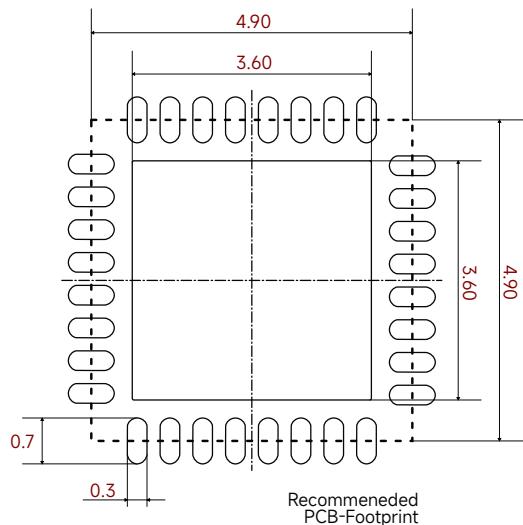

15 Recommended Soldering Temperature Curve

